

Shatter Safe®

Security Window Films

Basic Window Film Installation Instructions

You will require a sharp blade, squeegee, spray bottle and lint free cloths.

Ensure that the film is kept clean while handling.
DO NOT fold or crease the film.

THE FILM IS APPLIED TO THE INSIDE OF YOUR WINDOW



01. Thoroughly wet the glass with soft or distilled water containing one drop of baby shampoo to two quarts of water in a spray type bottle.



02. Scrape the window clean using a window scraper or similar tool on an angle and lightly so as not to scratch the surface of the glass.

03. Squeegee the window and dry with lint free cloth. Wipe around the edge of the glass and frame. Re wet the glass using the same solution.




04. Spray soapy solution on your fingers and separate the clear liner from the film using 2 pieces of tape.



05. Thoroughly soak the adhesive side of the film (The side the liner was attached to).




06. Place the adhesive side of the film on the glass leaving an overlap all the way around the edge of the frame.

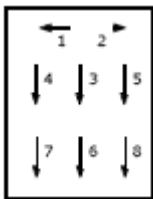

07. Using the same water and soap solution. Wet the surface of the film and squeegee following this pattern.



08. Trim the overlap with a Sharp box cutter style blade leaving a .125 gap. Equals about 1/8 of an inch to the inside of the frame.

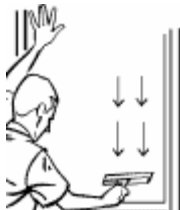

09. Wet the film again and squeegee using the same pattern as before.

10. Wipe any excess water from the film and around the frame. Lightly buff the film with a lint free cloth to remove any fingerprints etc.

DO NOT CLEAN WITH AMMONIA

Helping to make all glass.... **“Shatter Safe”™**